


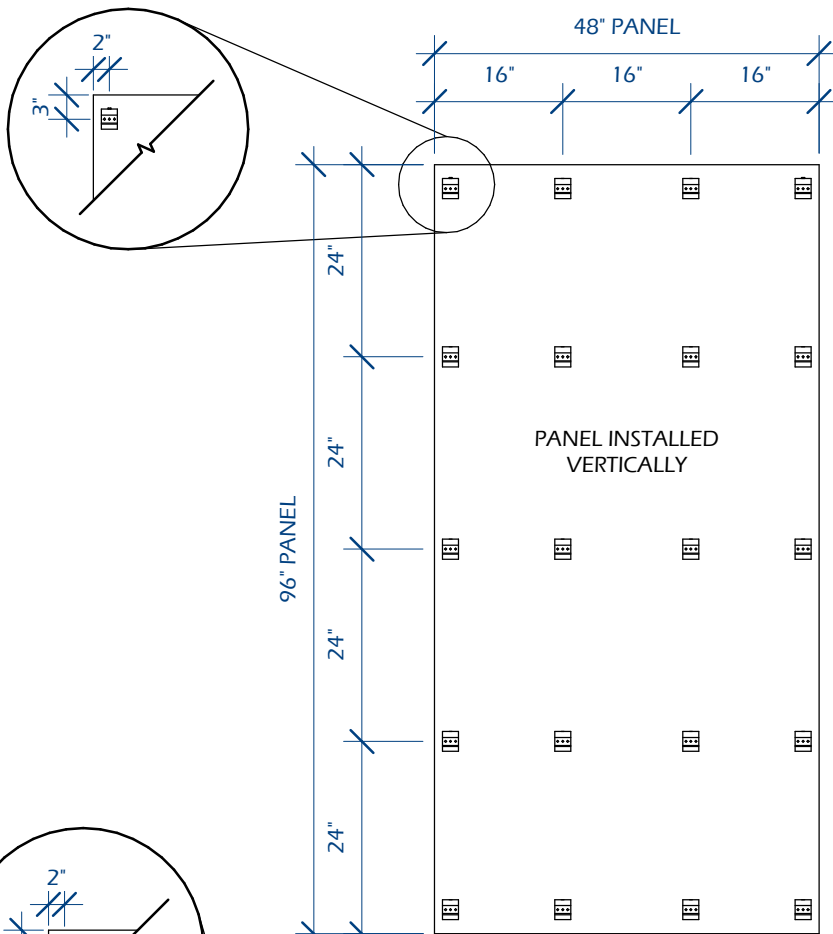


IMPORTANT NOTES

BRACKET INSTALLATION

INSTALL BRACKETS AT THE DIMENSIONS INDICATED ON THE REFERENCE DETAILS AND AT THE PANEL CORNERS. THE SPACING BETWEEN BRACKETS MUST NEVER EXCEED 16 INCHES OR 24 INCHES.

FOR PANELS WITH IRREGULAR DIMENSIONS, USE THE DIMENSIONS INDICATED AT THE CORNERS AND SPACE THE BRACKET UNIFORMLY SO THAT THEY ARE CENTERED BETWEEN ONE ANOTHER, WITHOUT EXCEEDING THE MAXIMUM SPACING SPECIFIED.

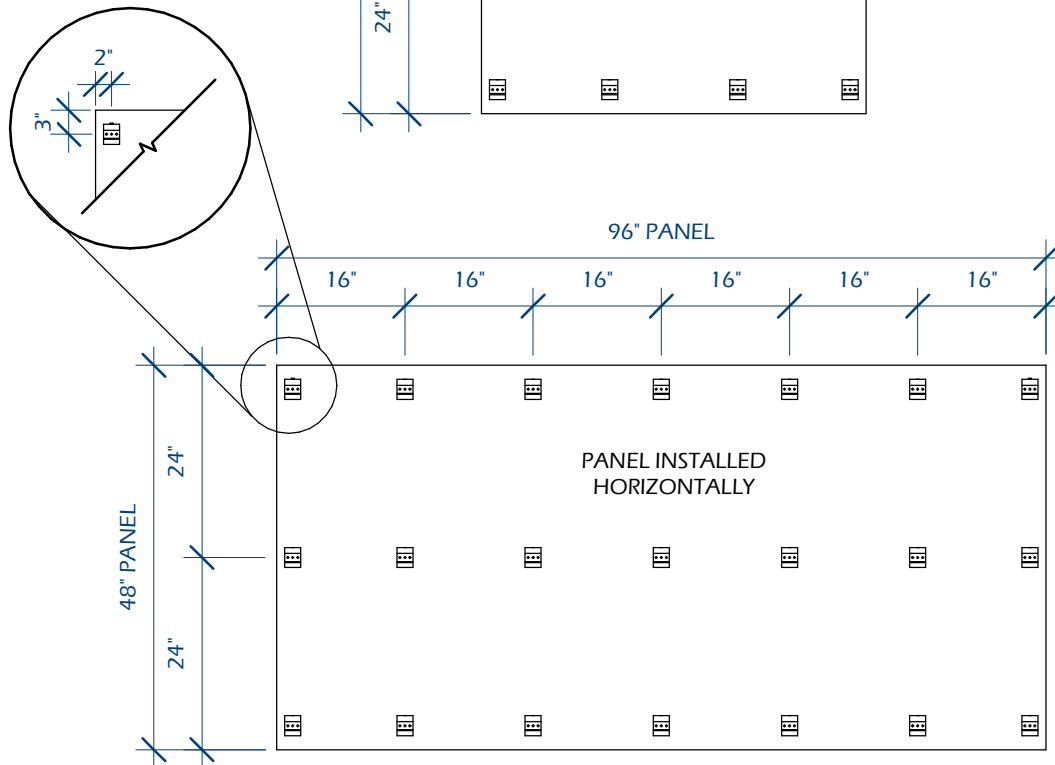

CEMFORT PANELS INC.
1915 ALFRED-NOBEL STREET
SALABERRY-DE-VALLEYFIELD
(QUEBEC) CANADA J6T 0E3

THE DETAILS IN THE CEMFORT GUIDE ARE PROVIDED FOR GENERAL REFERENCE ONLY AND REPRESENT TYPICAL CONDITIONS FOR THE ATTACHMENT SYSTEMS. SPECIFIC ENGINEERING WORK IS REQUIRED TO ACCOUNT FOR WIND LOAD, COATING WEIGHT, TYPE, PROJECTION, SPACING, ETC. CONTACT CEMFORT FOR FURTHER INFORMATION. ALL IMPLIED WARRANTIES, INCLUDING THOSE RELATING TO FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

TITLE :
ATTACHING THE BRACKETS

SYSTEM :
CEM-CORE

DATE :
01-09-2026

SCALE :
1/2" = 1'-0"

PAGE :
1